


Riscaldamento a Pellet





PELLET STOVES USER MANUAL
INSERTO COMFORT P70 AIR - P70 AIR PLUS



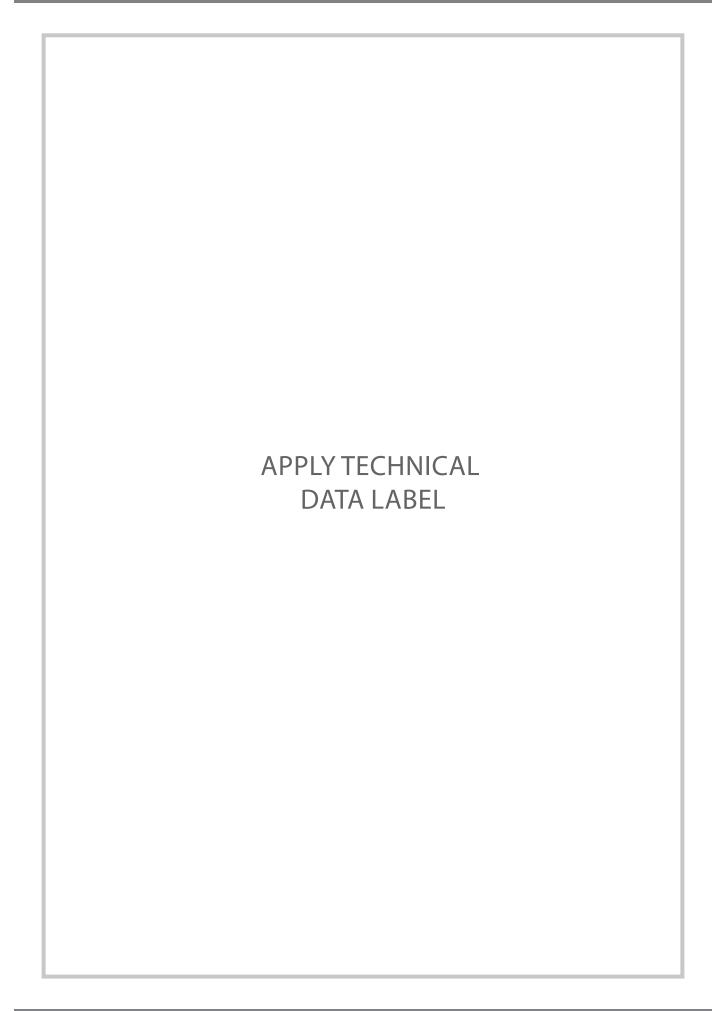



A ATTENTION





SURFACES CAN BECOME VERY HOT! ALWAYS USE PROTECTIVE GLOVES!

During combustion, thermal energy is released that significantly increases the heat of surfaces, doors, handles, controls, glass, exhaust pipes, and even the front of the appliance. Avoid contact with those elements if not wearing protective clothing (protective gloves included). Make sure children are aware of the danger and keep them away from the stove during operation.

ENGLISH	4
	_
WARNINGS	
SAFETY	
ROUTINE MAINTENANCEINSTALLATION	
PREPARATIONS FOR MAINTENANCE	
DETAILS OF INSERTO COMFORT P70 AIR.	
COMFORT P70 AIR PLUS INSERT DETAILS	
INSTALLATION INSERTO COMFORT P70 AIR - P70 AIR PLUS	
GENERAL	
MINIMUM CLEARANCE	
INSTALLATION	
FRESH AIR DUCTS	14
EXISTING INSTALLATION	14
NEW INSTALLATION	
SAFETY LATCH	16
EXTRACTION OF INSERT AND PELLET LOADING	
PELLETS AND FEEDING	17
OPTIONAL LOADING ACCESSORIES	
FRONT PELLET LOADING KIT	
UPPER/SIDE PELLET LOADING KIT	18
BULB THERMOSTAT REARM	
COMFORT P70 AIR PLUS HOT AIR DUCTING	
ADDITIONAL THERMOSTAT TO CONTROL THE DUCT MOTOR	19
OPERATION IN AIR DUCTING WITH THERMOSTAT OR PROBE (OPTIONAL)	20
EMERGENCY MODULE	
RADIO CONTROL	
CONFIGURATION	22
RADIO CONTROL ROOM PROBE CALIBRATION	
BATTERY TYPE AND REPLACEMENT	22
RADIO CONTROL FEATURES	23
DISPLAY	
GENERAL MENU	
GENERAL WARNINGS	
FIRST IGNITION SETTINGS	
DATE/TIME	
LANGUAGE DEGREES	
OPERATION AND LOGIC	
MODES	
FRONT AIR	
AIR DUCTING (P70 AIR PLUS ONLY)	
AIR ZONE CONTROL (P70 AIR PLUS ONLY)	
EASY SETUP	28
CHRONO	29
ENABLING	29
PRG 1-4	
SETTINGS	
DISPLAY	
STAND BY	
OPERATION WITH ADDITIONAL THERMOSTAT (OPTIONAL)	
FIRST LOAD	
DELTA-T	
RESETEASY CONTROL	
ADDITIONAL FUNCTIONS	
DELAY SWITCH-OFF	
CLEANING AND MAINTENANCE	
MAINTENANCE	
PERIODIC CLEANING UNDER USER'S RESPONSIBILITY	
ROUTINE MAINTENANCE PERFORMED BY QUALIFIED TECHNICIANS	
SHUT-DOWN (END OF SEASON)	
DISPLAYS	
ALARMS	39
DISPOSAL	40



We thank you for having chosen our company; our product is a great heating solution developed from the most advanced technology with top quality machining and modern design, aimed at making you enjoy the fantastic sensation that the heat of a flame gives, in complete safety.

WARNINGS

This instructions manual is an integral part of the product: make sure that it always accompanies the appliance, even if transferred to another owner or user, or if transferred to another place. If it is damaged or lost, request another copy from the area technician. This product is intended for the use for which it has been expressly designed. The manufacturer is exempt from any liability, contractual and extracontractual, for injury/damage caused to persons/animals and objects, due to installation, adjustment and maintenance errors and improper use.

Installation must be performed by qualified staff, which assumes complete responsibility for the definitive installation and consequent good functioning of the product installed. One must also bear in mind all laws and national, regional, provincial and town council Standards present in the country in which the appliance has been installed, as well as the instructions contained in this manual.

The use of the appliance must comply with all local, regional, national and European regulations.

The Manufacturer cannot be held responsible for the failure to comply with such precautions.

After removing the packaging, ensure that the content is intact and complete. Otherwise, contact the dealer where the appliance was purchased. All electric components that make up the product must be replaced with original spare parts exclusively by an authorised after-sales centre, thus guaranteeing correct functioning.

SAFETY

◆ THE APPLIANCE MAY BE USED BY CHILDREN 8 YEARS OF AGE OR OLDER AND INDIVIDUALS WITH REDUCED PHYSICAL, SENSORY, OR MENTAL CAPACITIES OR WITHOUT EXPERIENCE OR THE NECESSARY KNOWLEDGE, PROVIDED THAT THEY ARE SUPERVISED OR HAVE



RECEIVED INSTRUCTIONS ON SAFE USE OF THE APPLIANCE AND THAT THEY UNDERSTAND THE INHERENT DANGERS.

- ◆ THE GENERATOR MUST NOT BE USED BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY AND MENTAL CAPACITIES OR WHO ARE UNSKILLED PERSONS, UNLESS THEY ARE SUPERVISED AND TRAINED REGARDING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- ◆ THE CLEANING AND MAINTENANCE REQUIRED BY THE USER MUST NOT BE PERFORMED BY CHILDREN WITHOUT SUPERVISION.
- ◆ CHILDREN MUST BE CHECKED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- ◆ DO NOT TOUCH THE GENERATOR WHEN YOU ARE BAREFOOT OR WHEN PARTS OF THE BODY ARE WET OR DAMP.
- IT IS FORBIDDEN TO MODIFY THE APPLIANCE IN ANY WAY.
- DO NOT PULL, REMOVE, TWIST THE ELECTRICAL CABLES COMING OUT OF THE PRODUCT EVEN IF IT IS DISCONNECTED FROM THE MAINS.
- IT IS ADVISED TO POSITION THE POWER SUPPLY CABLE SO THAT IT DOES NOT COME INTO CONTACT WITH HOT PARTS OF THE APPLIANCE.
- ◆ THE POWER SUPPLY PLUG MUST BE ACCESSIBLE AFTER INSTALLATION.
- DO NOT CLOSE OR REDUCE THE DIMENSIONS OF THE AIRING VENTS IN THE PLACE OF INSTALLATION. THE AIRING VENTS ARE ESSENTIAL FOR CORRECT COMBUSTION.
- DO NOT LEAVE THE PACKAGING ELEMENTS WITHIN REACH OF CHILDREN OR UNASSISTED DISABLED PERSONS.
- THE HEARTH DOOR MUST ALWAYS BE CLOSED DURING NORMAL FUNCTIONING OF THE PRODUCT.
- ◆ WHEN THE APPLIANCE IS FUNCTIONING AND HOT TO THE TOUCH, ESPECIALLY ALL EXTERNAL SURFACES, ATTENTION MUST BE PAID
- ◆ CHECK FOR THE PRESENCE OF ANY OBSTRUCTIONS BEFORE SWITCHING THE APPLIANCE ON FOLLOWING A PROLONGED PERIOD OF INACTIVITY.
- ◆ THE GENERATOR HAS BEEN DESIGNED TO ADJUST ITSELF AUTOMATICALLY IN PARTICULAR OPERATING CONDITIONS
- ◆ THE GENERATOR HAS BEEN DESIGNED TO FUNCTION IN ANY CLIMATIC CONDITION. IN PARTICULARLY ADVERSE CONDITIONS

ENGLISH !



(STRONG WIND, FREEZING) SAFETY SYSTEMS MAY INTERVENE THAT SWITCH THE GENERATOR OFF. IF THIS OCCURS, CONTACT THE TECHNICAL AFTER-SALES SERVICE AND ALWAYS DISABLE THE SAFETY SYSTEMS.

- ◆ IN THE EVENT THE FLUE CATCHES FIRE, USE SUITABLE SYSTEMS FOR SUFFOCATING THE FLAMES OR REQUEST HELP FROM THE FIRE BRIGADE.
- THIS APPLIANCE MUST NOT BE USED TO BURN WASTE
- DO NOT USE ANY FLAMMABLE LIQUIDS FOR IGNITION
- ◆ DURING THE FILLING PHASE DO NOT PUT THE BAG OF PELLETS TO INTO CONTACT WITH THE PRODUCT
- THE MAJOLICAS ARE TOP QUALITY ARTISAN PRODUCTS AND AS SUCH CAN HAVE MICRO-DOTS, CRACKLES AND CHROMATIC IMPERFECTIONS. THESE FEATURES HIGHLIGHT THEIR VALUABLE NATURE. DUE TO THEIR DIFFERENT DILATION COEFFICIENT, THEY PRODUCE CRACKLING, WHICH DEMONSTRATE THEIR EFFECTIVE AUTHENTICITY. TO CLEAN THE MAJOLICAS, IT IS RECOMMENDED TO USE A SOFT, DRY CLOTH. IF A DETERGENT OR LIQUID IS USED, THE LATTER COULD PENETRATE INSIDE THE CRACKLES, HIGHLIGHTING THEM.
- ◆ SINCE THE PRODUCT CAN TURN ON AUTOMATICALLY THANKS TO THE TIMER, OR REMOTELY USING THE DEDICATED APPLICATIONS, IT IS STRICTLY FORBIDDEN TO LEAVE ANY COMBUSTIBLE OBJECT WITHIN THE SAFETY DISTANCES INDICATED ON THE TECHNICAL DATA PLATE.
- **◆ INTERNAL COMBUSTION CHAMBER PARTS CAN BE SUBJECT TO EXTETICAL WARN, IT DOESN'T AFFECT THE FUNCTIONALITY**

ROUTINE MAINTENANCE

Based on Decree 22 January 2008 n°37 art.2, routine maintenance means interventions aimed at reducing degradation due to normal use, as well as dealing with accidental events entailing the need of first interventions, which however do not modify the structure of the system upon which one is intervening or its intended use according to the requirements laid down by the technical standards in force and by the manufacturer's use and maintenance manual.



INSTALLATION

GENERAL

The flue gas exhaust and hydraulic connections must be carried out by qualified personnel who must issue installation conformity documentation compliant with national standards.

The installer must provide the owner or person acting for him, according to the legislation in force, with the declaration of conformity, supplied with:

- 1) the use and maintenance manual of the appliance and of the system components (such as for example, the smoke ducts, chimney, etc.);
- 2) photocopy or photograph of the chimney plaque;
- 3) system booklet (where applicable).

The installer must ask to be issued with a receipt stating that the documentation has been provided, and must keep it with a copy of the technical documentation relating to the installation.

For installation in a condominium, prior approval from the condominium's administrator must be requested.

Where required, check the exhaust gas emissions after installation. Should a sampling point be installed, it must be airtight.

COMPATIBILITY

Do not install in rooms with a fire hazard. It is also forbidden to install it in living areas with the following characteristics:

- 1. where there are liquid fuel appliances with continuous or discontinuous operation that draw the combustion air into the room in which they are installed.
- 2. where there are type B gas appliances intended for heating, with or without domestic hot water production and in adjacent and communicating
- 3. where the depression measured in situ between the external and internal environment is greater than 4 Pa.
- N.B.: Watertight appliances can also be installed in the cases indicated in points 1, 2 and 3 of this paragraph.

INSTALLATIONS IN BATHROOMS, BEDROOMS AND STUDIO FLATS


Installation in bathrooms, bedrooms and studio flats is only allowed for sealed or closed hearth appliances with ducted combustion air taken from the outside.

POSITIONING AND SAFETY DISTANCES

The support surfaces and/or points must have a suitable capacity to bear the overall weight of the appliance, accessories and coverings. If the floor is made of a combustible material, we recommend using a non-combustible material to protect the front part from any burnt material which might fall during routine cleaning operations. The generator must be level to function properly. The side walls, the rear walls and the floor support surface should be made of non-combustible material.

MINIMUM DISTANCES (PELLET STOVES)

Installation next to flammable or heat-sensitive materials is permitted **only if the special safety distances specified on the label at the beginning of the manual (pag.2) are observed**. If the materials are not flammable, you must keep a side and rear distance of at least 100 mm (without the inserts). For products equipped with rear spacers, wall-mounting installation is permitted <u>exclusively for the rear side</u>.

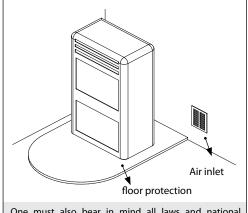

One must also bear in mind all laws and national, regional, provincial and town council regulations in force in the country in which the appliance has been installed, as well as the instructions contained in this manual.

PREPARATIONS FOR MAINTENANCE

To carry out extraordinary maintenance operations on the product, it may be necessary to move it away from the adjacent walls. This must be done by a technician authorised to disconnect the combustion product evacuation ducts and then reconnect them. For heaters connected to the hydraulic system, the connection between the system itself and the product must be made in such a way that, when an authorised technician is about to carry out extraordinary maintenance operations, it is possible to move the heater at least 1 metre away from the adjacent walls.

INSTALLING INSERTS

When installing inserts, access must be prevented to the internal parts of the appliance and it must not be possible to access live parts during extraction operations.

Any wiring, for example the power cable or room probe, must be positioned so as not to be damaged during movement of the insert and must not come into contact with hot parts. If a cavity made of combustible material is installed, we recommend taking all the safety precautions indicated by the installation standards.

VENTILATION AND AERATION OF INSTALLATION ROOMS

In case of non-airtight heater and/or installation, the ventilation must respect the minimum area indicated below (considering the highest value among those provided):

Appliance categories	Reference standard	Percentage of the net opening section with respect to the appliance fumes outlet section	Minimum net opening value of the ventilation duct
Pellet stoves	UNI EN 14785	-	80 cm²
Boilers	UNI EN 303-5	50%	100 cm²

Under any condition, including in the presence of extractor hoods and/or of controlled forced ventilation systems, the pressure difference between the generator installation rooms and the outside must always be equal to or less than 4 Pa.



In the presence of type B gas appliances with intermittent operation not intended for heating, they must have their own aeration and/or ventilation opening.

The air inlets must meet the following requirements:

- they must be protected with grids, metal mesh, etc., but without reducing the net useful section;
- they must be made so as to make the maintenance operations possible;
- positioned so that they cannot be obstructed;

The clean and non-contaminated air flow can also be obtained from a room adjacent to that of installation (indirect aeration and ventilation), as long as the flow takes place freely through permanent openings communicating with the outside.

The adjacent room cannot be used as a garage, or to store combustible material or for any other activity with a fire hazard, bathroom, bedroom or common room of the building.

FLUE GAS EXHAUST

The heat generator works in depression and is equipped with an outlet fan for flue gas extraction. There must be a single exhaust system for the generator. Using a flue that is shared with other devices is not allowed.

The components of the flue gas exhaust system must be chosen in relation to the type of appliance to be installed in compliance with:

- UNI/TS 11278 in the event of metal chimneys, with particular attention to that stated in the specification;
- UNI EN 13063-1 and UNI EN 13063-2, UNI EN 1457, UNI EN 1806 in the event of non-metallic chimneys.
- The length of the horizontal section must be minimal and, in any case, no longer than 3 metres, with a minimum upward slope of 3%
- There must not be more than 4 direction changes including the one due to the use of the "T" element.
- A "T" fitting with a condensation collection cap must be provided at the base of the vertical section.
- If the exhaust is not inserted in an existing flue, a vertical section with a windproof end piece is required (UNI 10683).
- The vertical duct can be inside or outside the building. If the smoke duct is inserted in an existing flue, it must be certified for solid fuel.
- If the smoke duct is outside the building, it must always be insulated.
- The smoke ducts must have at least one airtight inlet for flue gas sampling.
- All the sections of the flue gas duct must be accessible to inspection.
- Inspection openings must be provided for cleaning.
- If the generator has a fume temperature lower than 160°C+ ambient temperature caused by the high yield (contact technicians) it MUST be resistant to humidity.
- A flue system that does not respect the previous points or, in general, that does not comply with the regulations, may cause condensation phenomena inside it.

CHIMNEY CAP

The chimney caps must meet the following requirements:


- they must have a useful outlet section no less than double that of the chimney/ducted system on which it is installed;
- they must be adapted in order to prevent the penetration of rain and snow in the chimney/ducted system;
- they must be built so that, in the event of winds coming from all directions and from any angle, the expulsion of combustion products is in any case ensured;

FOR GERMANY ONLY

The product can be connected to a shared flue (multi-connection) provided that the requirements of the regional and national regulations, amongst which DIN EN 13384-2, DIN V 18160-1, DIN 18896 and of the MFeuV-2007 (Muster-Feuerungsverordnung) are strictly complied with, and that the local chimney sweep has checked and approved the installation conditions.

- Please also remember the following indications, which the end user must comply with:

 The device can be operated only with the doors closed.
- The doors and all setting devices must remain closed when the device is not on (except for cleaning and maintenance operations).

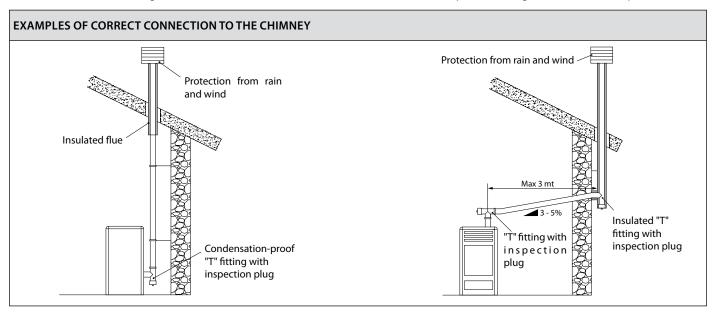


CONNECTION TO THE MAINS ELECTRIC SUPPLY


The generator is supplied with an electric power cable to be plugged into a 230V 50 Hz socket, possibly with a circuit breaker switch. The socket must be easily accessible.


The electrical system must be compliant with standards. The efficiency of the earthing circuit must be checked. Unsuitable earthing of the system can cause malfunctioning for which the manufacturer will not be held liable. Power supply variations beyond 10% can cause faulty operation of the product.




DETAILS OF INSERTO COMFORT P70 AIR

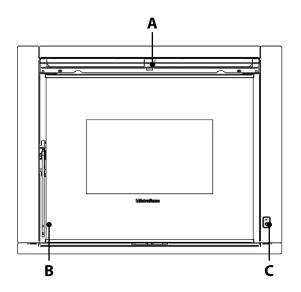

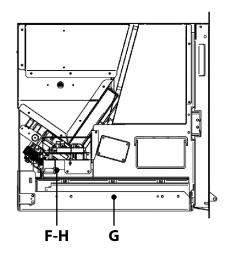

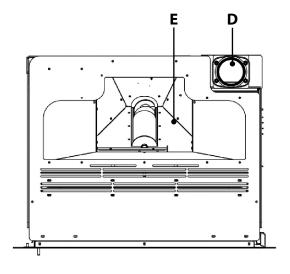


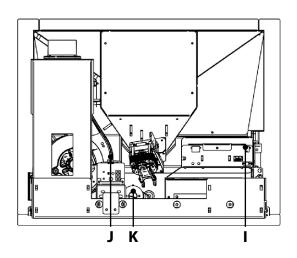



A	Ambient air outlet	E	Pellet hopper	ı	TA inlet
В	Access to combustion chamber and ash drawer	F	Fuse	J	230V power supply
С	Emergency module	G	Rail	К	Combustion air inlet
D	Fumes outlet	н	Bulb thermostat rearm		




COMFORT P70 AIR PLUS INSERT DETAILS

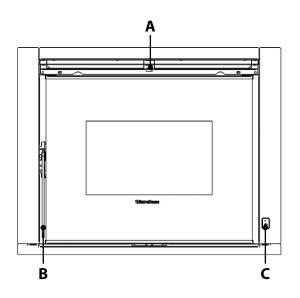

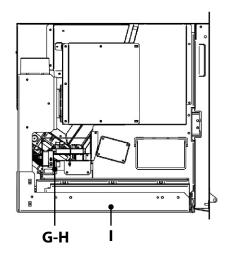

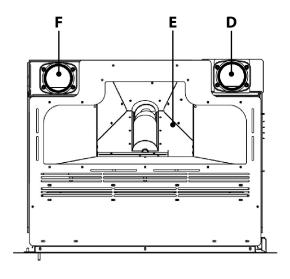

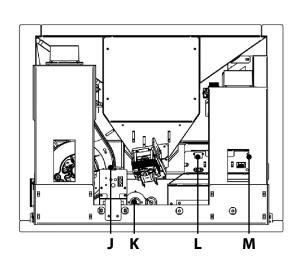


Α	Room air outlet	E	Pellet hopper	J	230V power supply
В	Access to combustion chamber and ash drawer	F	Air ducting Z1 outlet	K	Combustion air inlet
С	Emergency module	G-H	Fuse Bulb thermostat reactivation	L	Ducting thermostat inlet Z1
D	Flue gas outlet	I	Rail	М	TA inlet



INSTALLATION INSERTO COMFORT P70 AIR - P70 AIR PLUS


ASSEMBLY MUST BE CARRIED OUT BY QUALIFIED PERSONNEL!

GENERAL

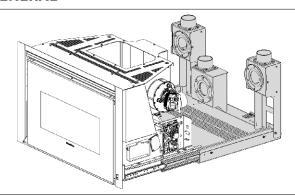

The insert is supplied with a sliding base in iron that allows it to be installed in a pre-existing chimney.

This sliding base allows the insert to be removed easily to load the pellets inside the hopper and for any maintenance or cleaning at the end of the season.

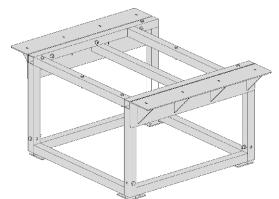


If there is no pre-existing chimney, one can be built using an insert-holder pedestal (optional kit). In fact, the latter fixes the insert to the ground.


ASSEMBLY: place the base in the chosen point and adjust the feet to the desired height. Install a socket on the rear of the pedestal in a way that the plug is accessible once installation has been performed. Fix the pedestal to the floor using have-duty steel plugs with diameter of 8mm. Take the sliding base and fix it to the pedestal.

Please note: If our pedestal is used, a slot must be created in the flue pipe to allow the pellet hopper level to be checked, thus avoiding spillage when it is being topped up.

MINIMUM CLEARANCE

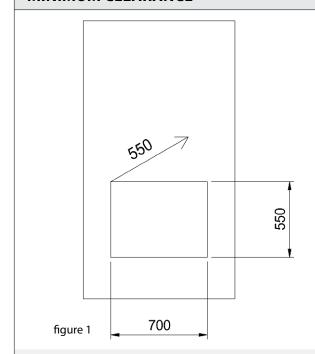


With front loading kit H=625mm

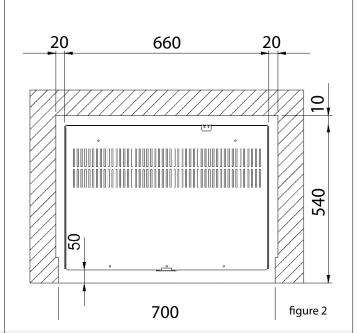


For the insert to operate correctly, a **minimum** side and rear space must be guaranteed, as shown in figure 2; the coatings must be made of **non-flammable** material.






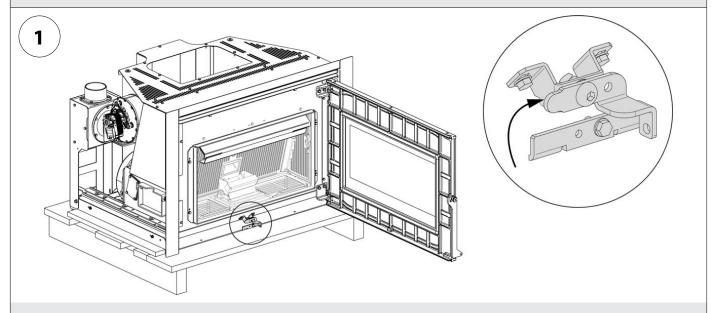

Open the door and release the latch using the poker supplied.

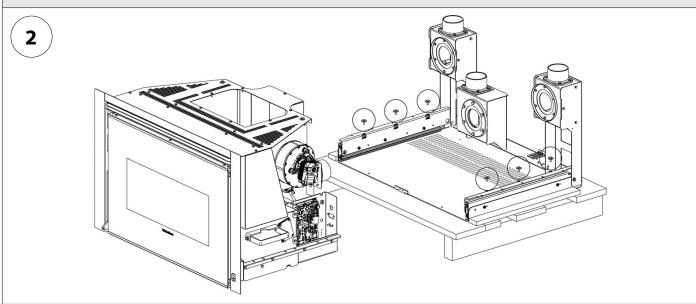


Remove the 6 screws and remove the flue pipe from the base.

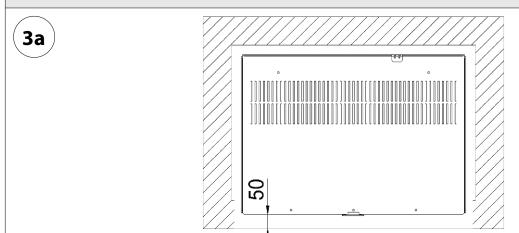


Fix the base to the existing flue pipe.

ATTENTION! RESPECT THE 50MM HEIGHT FOR OPENING AND CLOSING THE INSERT CORRECTLY!




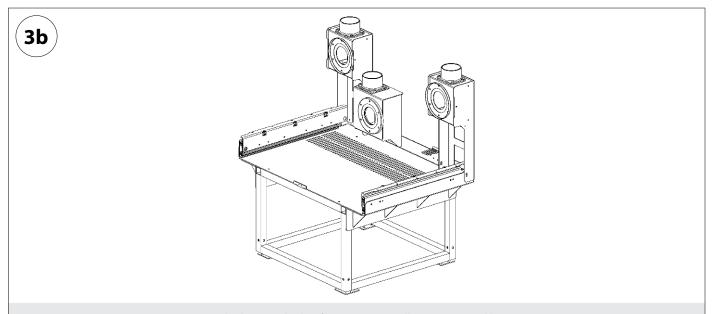

Fix the base to the kit if it is a new installation (optional kit).

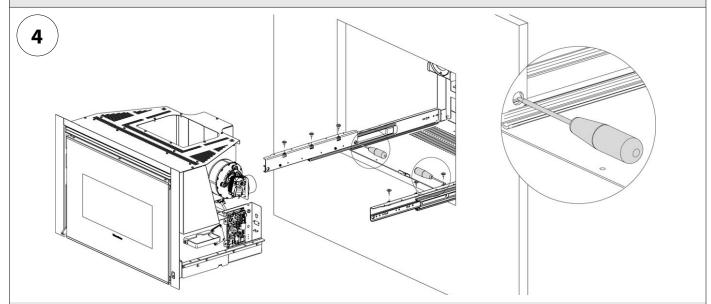

Block the rails with two screwdrivers and secure the flue pipe to the base with 6 screws.

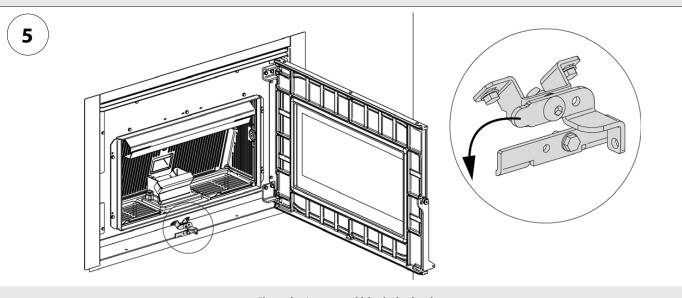

Close the insert and block the latch.

ENGLISH 1:



FRESH AIR DUCTS


For correct operation, air must be allowed to recirculate inside the structure that covers the insert in order to prevent the appliance from overheating.

To guarantee this, just realise one or more openings in the lower and upper part of the covering.

The following measurements must be respected:


- **◆ LOWER PART (COLD AIR INLET) WITH TOTAL MINIMUM SURFACE 240 CM².**
- **◆ UPPER PART (HOT AIR OUTLET) WITH TOTAL MINIMUM SURFACE 240 CM².**

The possible set-ups which must be respected are indicated below.

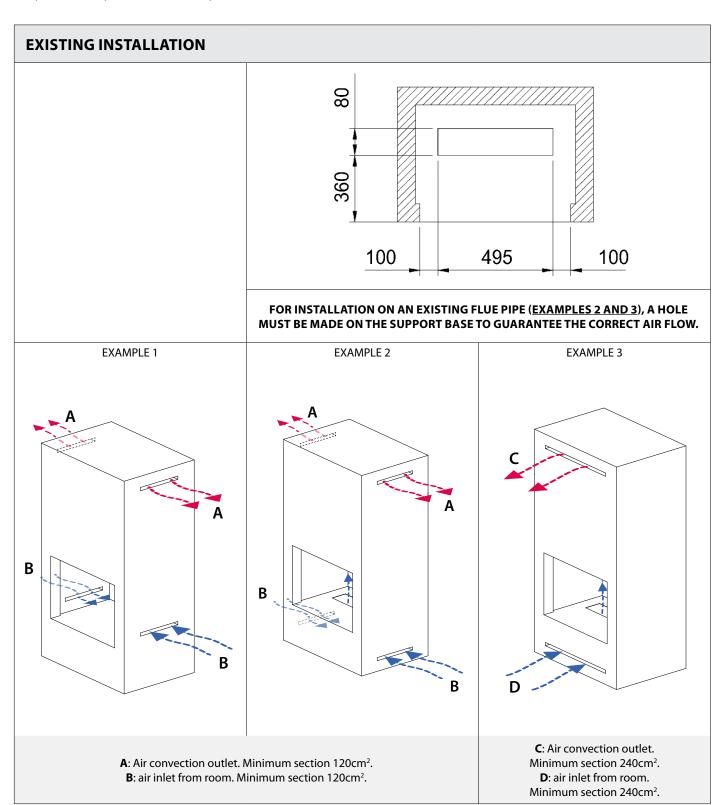





NEW INSTALLATION

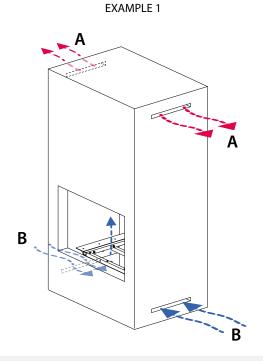

A: Air convection outlet. Minimum section 120cm². **B**: air inlet from room. Minimum section 120cm².

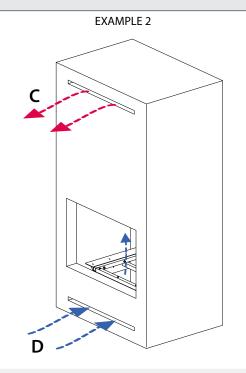

C: Air convection outlet. Minimum section 240cm². **D**: air inlet from room. Minimum section 240cm².

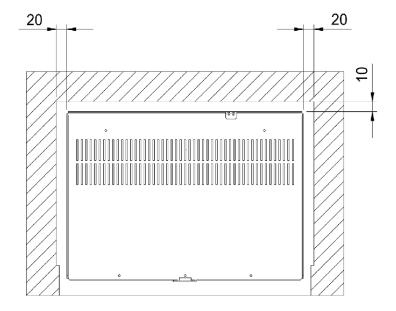

For the insert to operate correctly, a **minimum** side of 20 mm and rear space of 10 mm must be guaranteed; the coatings must be made of **non-flammable** material.




IMPORTANT: ALL THE OPENINGS CREATED FOR THE CORRECT AIR CIRCULATION MUST PREVENT THE ENTRY OF HAZARDOUS PARTS BY USING SPECIFIC GRILLES, BUT STILL GUARANTEEING THE MINIMUM AIR FLOW REQUIRED. THE PIPE FOR FUMES OUTLET MUST ALWAYS MAINTAIN A MINIMUM DISTANCE OF 50 MM FROM INFLAMMABLE PARTS.




TO SAFEGUARD FROM ANY OVERHEATING, THE INSERT IS SUPPLIED WITH A PROBE THAT ANALYSES THE TEMPERATURE INSIDE THE STRUCTURE AND INTERVENES BY REDUCING THE FUNCTIONING POWER.



SAFETY LATCH

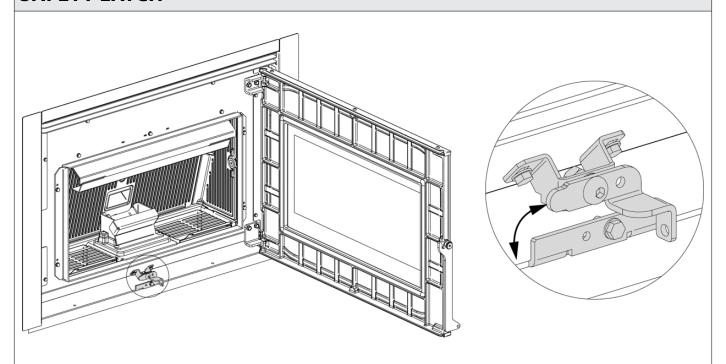

Use the poker supplied to perform the release/block operation. (Turn clockwise to release and anti-clockwise to block).

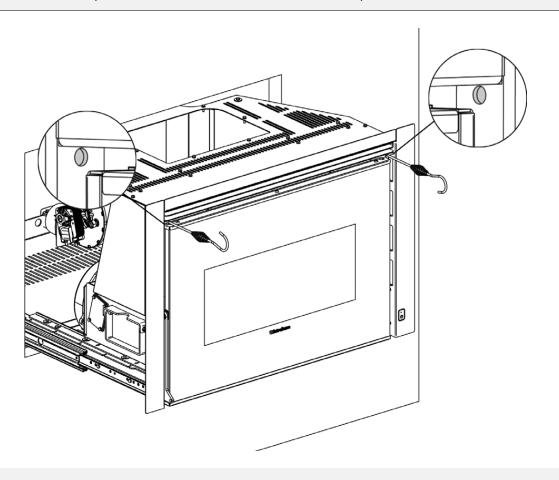

Holes present on two sides for the extraction of the insert via pokers.

Extraction of the insert allows both the pellets to be loaded inside the hopper and routine maintenance (cleaning the ash pipe at year end) or unscheduled maintenance (replacement of mechanical parts if the product should break) to be performed.



EXTRACTION OF INSERT AND PELLET LOADING

Extraction of the insert allows both the pellets to be loaded inside the hopper and routine maintenance (cleaning the ash pipe at year end) or unscheduled maintenance (replacement of mechanical parts if the product should break) to be performed.


To extract the insert, follow the procedure below:

Open the fire door and turn the latch clockwise (using the poker supplied).

Turn the stove towards you using the pokers supplied until it blocks automatically.



THE INSERT MUST ONLY BE PULLED OUT WHEN THE STOVE IS SWITCHED OFF AND COMPLETELY COLD! THE SURFACES MAY BE VERY HOT! ALWAYS USE SAFETY GLOVES!

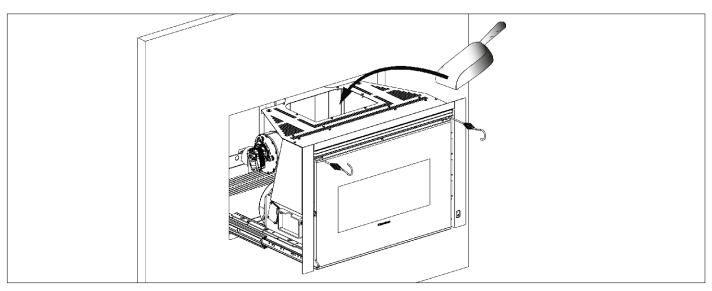

PELLETS AND FEEDING

Pellets are made by subjecting wood shavings i.e. the rejects of pure wood (without paint) sawmill, carpenter products and products from other activities connected to working and transforming wood, to very high pressures.

This type of fuel is fully ecological as no glues are used to hold it together. Indeed, the pellets remain compact over time due to a natural substance found in wood: lignin.

As well as being an ecological fuel, as wood residues are made the most of, the pellet also has technical advantages.

While wood has a calorific value of 4.4 kWh/kg. (with 15% humidity, thus after 18 months of seasoning), the calorific value of the pellet is 5 kWh/kg.

Pellet density is about 650 kg/m3 and water content is equal to 8% of its weight. For this reason, the pellets do not need to be seasoned in order to obtain a sufficiently adequate heat yield.

The pellets used must be class **A1** certified according to standard **ISO 17225-2** (**ENplus-A1, DIN Plus** or **NF 444** of the following category: "High quality NF biocombustible wood pellets").

UNI EN 303-5 with the following characteristics: water content \leq 12%, ash content \leq 0.5% and lower calorific value >17 MJ/kg (in the case of boilers).

The Manufacturer recommends using pellets with a <u>diameter of 6mm</u> with its products.

PELLET STORAGE

To guarantee combustion without problems, the pellets must be kept in a dry place. Open the tank lid and load the pellets using a scoop.



DO NOT PLACE THE BAG DIRECTLY ON THE STOVE WHEN LOADING THE HOPPER! ALWAYS USE A SCOOP TO LOAD THE HOPPER.




THE USE OF POOR QUALITY PELLETS OR ANY OTHER MATERIAL DAMAGES THE FUNCTIONS OF YOUR STOVE AND CAN VOID THE WARRANTY AND THE RELEVANT RESPONSIBILITY OF THE MANUFACTURER.
TO GUARANTEE COMBUSTION WITHOUT PROBLEMS, THE PELLETS MUST BE KEPT IN A DRY PLACE.



OPTIONAL LOADING ACCESSORIES


FRONT PELLET LOADING KIT

The optional pellet loading kit allows to load the pellets into the hopper from the front without having to remove the insert (which would require the machine to be switched off).

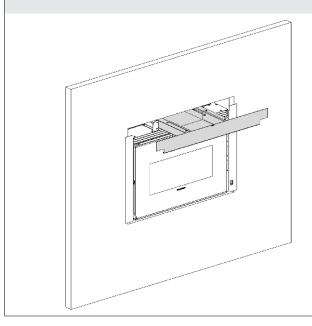

UPPER/SIDE PELLET LOADING KIT

The optional pellet loading kit allows to load the pellets into the hopper without removing the insert from the installation opening (which would require the machine to be switched off). The kit can be assembled at a later time too.

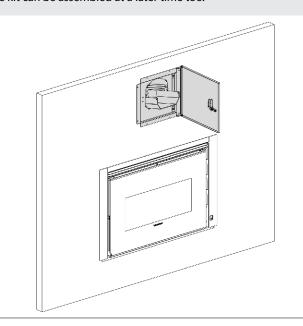



DO NOT LOAD A GREATER NUMBER OF PELLETS THAN THE CAPACITY OF THE HOPPER AND DO NOT DROP PELLETS INSIDE THE PRODUCT.




IN CASE OF INSTALLATION WITH LOADING KIT (OPTIONAL) THE MACHINE MUST NOT BE REMOVED.

Further information on accessories is available on the website under the category "accessories".


BULB THERMOSTAT REARM

The figure below shows the hopper rearm position. It is recommended to contact the qualified technician if one of the rearms should be triggered, so as to verify the cause.

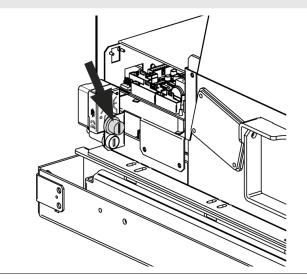

FUSE

If the stove is not powered, it is recommended to have the fuse checked by a qualified technician.

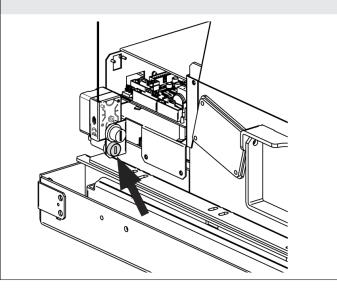



COMFORT P70 AIR PLUS HOT AIR DUCTING

The model is equipped with a ducting outlet. The pipe used for ducting the hot air must have an internal diameter of 80 mm and it must also be insulated or at least be protected against heat dispersion.

AIR DUCTING FEATURES					
• Rear outlet	Possibility to thermostat the ducting				
Diameter of air ducting outlet: 80 mm	• 2 possible settings: COMFORT, AUTO .				
Maximum recommended air ducting length 8 m					



THE RELEVANT HOT AIR DUCTING PIPE MUST BE INSTALLED BY QUALIFIED PERSONNEL AND/OR BY THE MANUFACTURER'S TECHNICIANS


ADDITIONAL THERMOSTAT TO CONTROL THE DUCT MOTOR

For models with duct motor, it is also possible to thermostat the motor itself. The connection to an external thermostat will allow for the duct motor to be controlled regardless of stove operation.

At this point, simply set the desired temperature on the thermostat; the thermostat will command the operation of the second motor:

- at the set temperature (contact closed), the air ducting motor will follow the stove settings.
- when the temperature has been reached (contact open), the motor will switch to minimum.

The duct thermostat terminal features a standard bridge. See the example image.

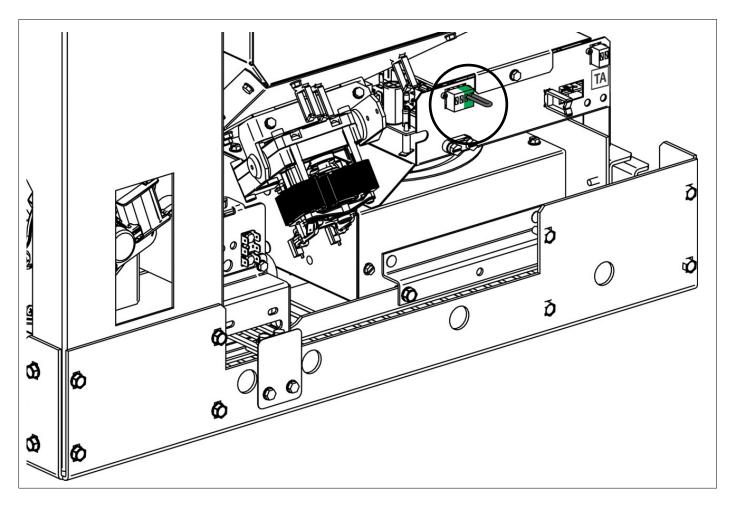



OPERATION IN AIR DUCTING WITH THERMOSTAT OR PROBE (OPTIONAL)

The stove is fitted with an independent motor for ducting. The connection of an external thermostat or temperature probe (NTC 10K) in the input, located in the rear part of the stove, makes it possible to control the air ducting motor independently of the stove. Suffice it to connect the thermostat/temperature probe and set the desired temperature.

For information on air ducting settings see chapter: "MENU - R AIR DUCTING"

WITH AMBIENT THERMOSTAT (OPTIONAL)

Remove the jumper and connect the ambient thermostat in the room that needs to be temperature-controlled through air ducting 1.

2 control modes:

OPERATION IN AIR DUCTING WITH AMBIENT THERMOSTAT (OPTIONAL)				
SET configured to AUTO (The temperature setting is not visible)	Once the specific activation threshold has been reached and exceeded, at temperature to be satisfied (CLOSED CONTACT) the air ducting motor will follow the stove settings. When the temperature set on the thermostat is reached (OPEN CONTACT), the air ducting motor will switch to minimum and then follow the stove settings again when there is a new request.			
SET configured to COMFORT (The temperature setting is not visible)	Once the specific activation threshold has been reached and exceeded, at temperature to be satisfied (CLOSED CONTACT) the air ducting motor will follow the stove settings but at a lower speed than in SET AUTO for increased acoustic/ambient comfort. When the temperature set on the thermostat is reached (OPEN CONTACT), the air ducting motor will switch to minimum and then follow the stove settings again, but at a lower speed when there is a new request.			

WITH PROBE (NTC 10K)

Remove the jumper and connect the NTC probe in the room that needs to be temperature-controlled through air ducting.

2 control modes:


OPERATION IN AIR DUCTING WITH NTC PROBE 10KΩ (OPTIONAL)				
SET configured to AUTO Set the desired temperature (from 7 to 37 °C)	Once the specific activation threshold has been reached and exceeded, at temperature to be satisfied the air ducting motor will follow the stove settings. When the set TEMPERATURE is reached, the air ducting motor will switch to minimum and then follow the stove settings again when there is a new request.			
SET configured to COMFORT Set the desired temperature (from 7 to 37 °C)	Once the specific activation threshold has been reached and exceeded, at temperature to be satisfied the air ducting motor will follow the stove settings but at a lower speed than in SET AUTO for increased acoustic/ambient comfort. When the set TEMPERATURE is reached, the air ducting motor will switch to minimum and then follow the stove settings again, but at a lower speed when there is a new request.			



EMERGENCY MODULE

The stove is fitted with an emergency module located at the side, allowing the basic operation of the stove in the event the handheld remote is damaged or malfunctions.

The functions that can be managed from the emergency module are:

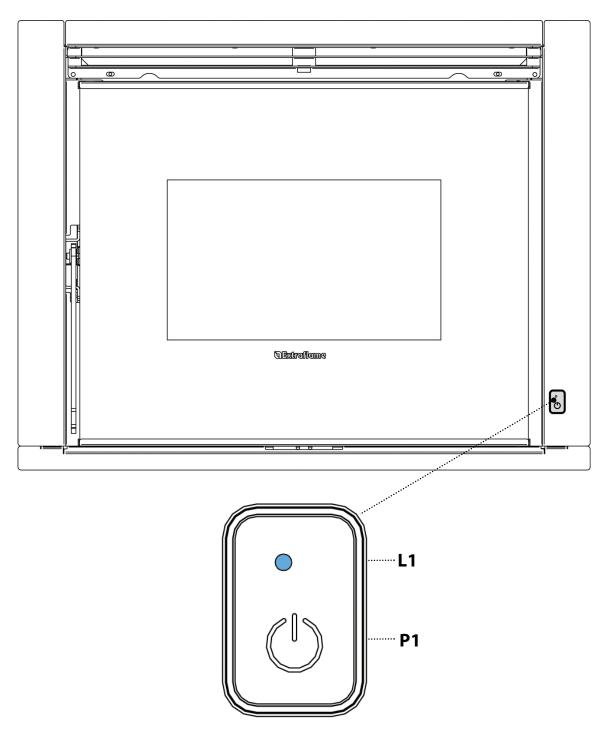

Key P1	Stove ignition/switch-off
L1: Blue LED off:	The stove is off.
L1: Blue LED on:	The stove is operating
L1: Blue LED flashing:	The stove is in ALARM state



RADIO CONTROL

CONFIGURATION

RADIO CONTROL CODING PROCEDURE:

- 1. Disconnect the power supply to the stove.
- 2. Press the keys and at the same time until the screen to choose *RADIO ID* appears.
- 3. Using keys \wedge and \vee select the new *RADIO ID*.
- 4. Power the stove. Confirm the selected unit within 10 seconds (the LED will flash on the radio/emergency card) by pressing the OK key on the remote control.
- 5. The LED on the radio/emergency card will remain on for 5 seconds to confirm the new configuration.
- 6. If the configuration was unsuccessful, the display will read "((i))". In this case, repeat the procedure.



THE RADIO CONTROL IS ALREADY CONFIGURED WITH "RADIO ID" 0". IF THERE IS ANOTHER STOVE, TO AVOID INTERFERENCES, A NEW CONFIGURATION MUST BE PERFORMED, MODIFYING ONE OF THE TWO STOVES.



SOME RADIO FREQUENCY DEVICES (E.G. MOBILE PHONES, ETC.) MAY CAUSE INTERFERENCE WITH COMMUNICATION BETWEEN THE RADIO CONTROL AND THE STOVE.

RADIO CONTROL ROOM PROBE CALIBRATION


This mode allows calibration of the room temperature detected by the radio control (with ventilation active only). For correct calibration, it is recommended to position the radio control in a room with constant temperature and wait for at least two hours. The procedure for calibration is the following:

- Access the menu and reach "TECH MENU".
- Set the access key "F4". "ADJ REMOTE PROBE"
- Using the keys or adjust the desired ambient calibration.
- Save and exit with the key

BATTERY TYPE AND REPLACEMENT

To insert/replace the batteries, suffice it to remove the battery protection cover at the back of the radio control device (figure 1). Insert the batteries in accordance with the symbols imprinted on the radio control device and on the battery itself.

Three AAA batteries are required for the radio control to function.

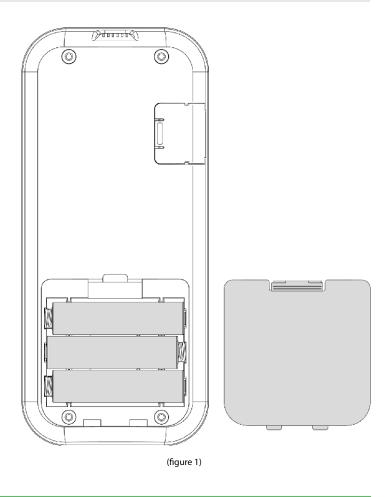



Respect the environment!

Used batteries contain metals that are harmful to the environment, and therefore must be disposed of separately in special containers.




RADIO CONTROL FEATURES

The radio control is fitted with an LCD backlit display. The display remains lit for 5 seconds. After a certain period of time, in order to minimise battery consumption, the display turns off (sleep mode).

It turns on again after pressing the ON/OFF key (6).

CAUTION!

Do not place the radio control device in direct or indirect contact with water. The radio control device may not work properly in the presence of humidity or if exposed to water.

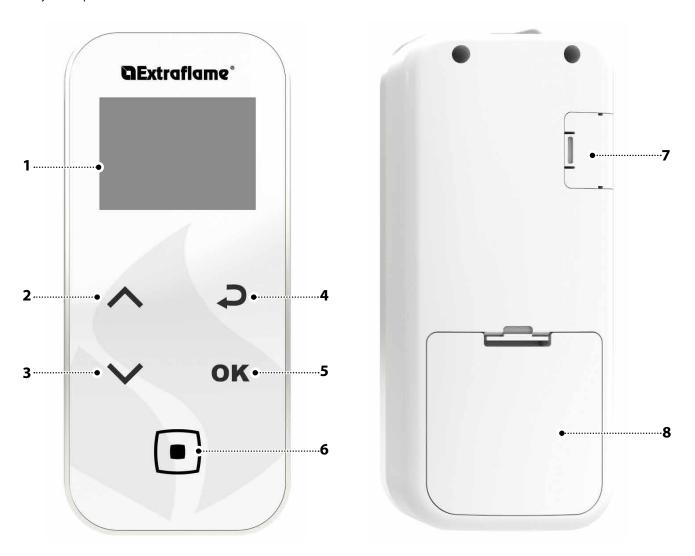



1	UPDATE
2	SET POWER/ scroll across in menus / increase - select a setting
3	SET THERMOSTAT room/ scroll across in menus / decrease - deselect a setting
4	Back key
5	Key to access MENU and CONFIRM
6	On/off stove or restore from sleep mode.
7	Serial cable input
8	Battery compartment

FREQUENCY BANDS	MAXIMUM POWER TRANSMITTED
868.3 MHz	4 mW ERP
869.85MHz	4 mW ERP




DISPLAY

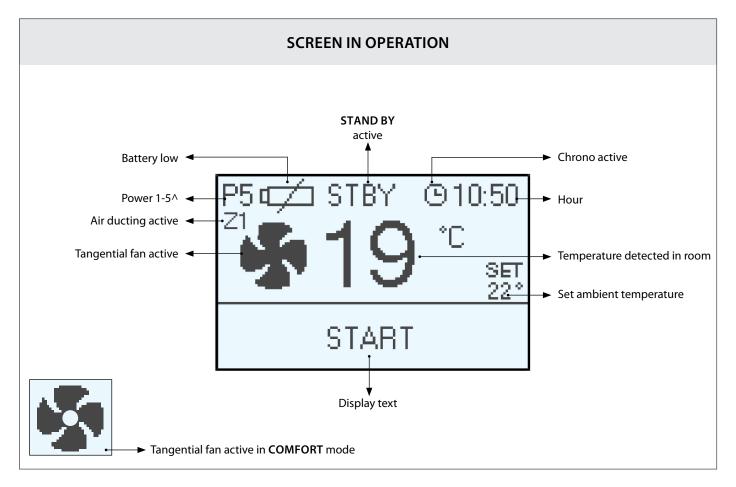

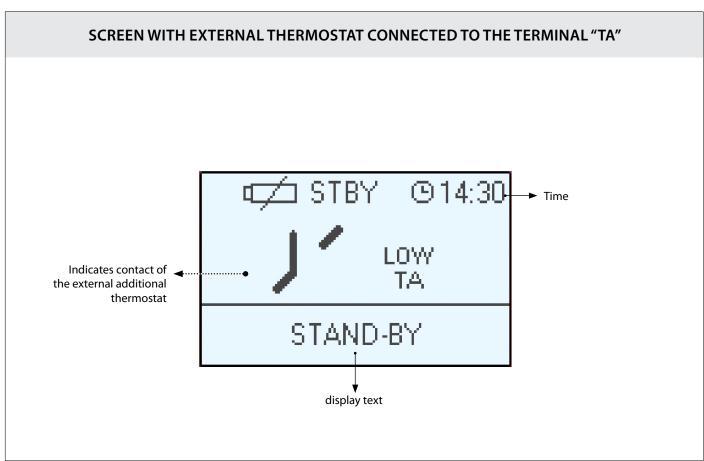



GENERAL MENU

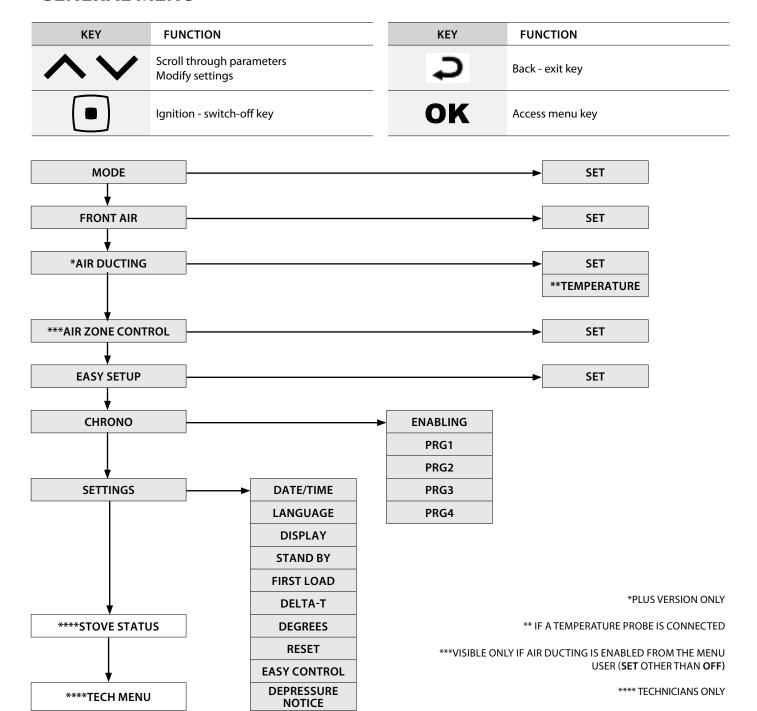

GENERAL WARNINGS

Advice to follow for the first start-ups of the product:

During the first hours of operation, there may be some smoke or odours, but they are due to the normal "thermal break-in" process. During this process, the duration of which changes depending on the product, it is recommended to:

- Ventilate the room well
- If present, remove any majolica or natural stone parts from the top part of the product
- Activate the product at the maximum power and temperature
- Avoid remaining in the room for a long time
- Do not touch the surfaces of the product

Notes:

The process is completed after a few heating/cooling cycles. For combustion, do not use elements or substances other than those indicated in the manual.

Before turning on the product, it is necessary to perform the following checks:

- If it is intended to be connected to a hydraulic system, it must be complete and fully functional and in compliance with the instructions given in the product manual and with the relevant regulations in force.
- The pellet hopper must be fully loaded
- The combustion chamber and the burn pot must be clean
- Make sure that the fire holder, the ash drawer and the pellet hopper close hermetically (if present in the hermetic version); they must be closed and there must be no foreign bodies in the sealing elements and gaskets.
- Check that the power cord is properly connected
- The bipolar switch (if present) must be set to position "1".



FIRST IGNITION SETTINGS

After connecting the power cord at the back of the generator, turn the switch (if any) to position (I). The switch is used to power the heat generator board.

If the switch is in the OFF position, the generator will remain off and the word OFF will appear on the panel.

DATE/TIME

This menu allows the date and time to be set.

To set: OK > SETTINGS > DATE/TIME.

LANGUAGE

This menu allows the preferred language to be selected.

The languages available are: Italian - English - German - French - Spanish - Portuguese - Danish - Estonian - Croatian - Slovenian - Dutch - Polish - Czech.

To set: OK > SETTINGS > LANGUAGE.

DEGREES

This menu allows you to set the desired unit of measurement.

To set: OK > SETTINGS > DEGREES


IT IS FORBIDDEN TO USE THE DEVICE WITHOUT A PARTITION (A) AND FLAME GUARD (B).



REMOVAL WILL COMPROMISE THE SAFETY OF THE PRODUCT AND RESULT IN THE IMMEDIATE NULLIFICATION OF THE WARRANTY PERIOD.

IN THE EVENT OF WEAR OR DETERIORATION, ASK THE AFTER-SALES SERVICE TO REPLACE THE PART

(REPLACEMENT DOES NOT FALL WITHIN THE PRODUCT WARRANTY AS THE PART IS SUBJECT TO WEAR).

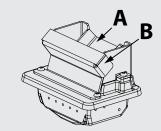



DO NOT USE ANY TYPE OF FLAMMABLE LIQUIDS FOR IGNITION!

DO NOT ALLOW THE BAG OF PELLETS TO COME INTO CONTACT WITH THE BOILING HOT STOVE DURING THE FILLING PHASE!

IN THE EVENT OF CONTINUED FAILURE TO LIGHT, CONTACT AN AUTHORISED TECHNICIAN.





THE APPLIANCE MAY FAIL TO LIGHT BECAUSE THE AUGER IS EMPTY AND NOT ALWAYS ABLE TO LOAD THE BURN POT FAST ENOUGH WITH THE PELLETS NEEDED FOR NORMAL IGNITION.

IF THE PROBLEM OCCURS AFTER ONLY A FEW MONTHS OF OPERATION, CHECK THAT THE ROUTINE CLEANING DESCRIBED IN THE STOVE HANDBOOK HAS BEEN CARRIED OUT CORRECTLY



OPERATION AND LOGIC

IGNITION

Once the previously listed points have been checked, press key for three seconds to ignite the stove. During ignition, the stove will check for a flame for a period of 15 minutes. Once the control temperature has been reached, the stove interrupts the ignition phase and switches to **PREPARATION**.

PREPARATION

During the preparation phase, the stove stabilises combustion, increasing it progressively, to then start ventilation and switch to WORK

WORK

In the work phase, the stove operates at the **POWER** defined by the user, heating the room until the **SET THERMOSTAT** is achieved. See next heading.

ADJUSTING SET THERMOSTAT

The ambient **SET THERMOSTAT** can be set using keys 2 and 3, from LOW-TA 7 - 37 °C - HOT. If the value is between 7 - 37 °C, the stove checks the ambient temperature by means of the radio control probe. Once the set temperature has been reached, the stove automatically reduces the power, guaranteeing best comfort and reducing pellet consumption: this process is called "modulation".

LOW-TA-HOT

If the **SET THERMOSTAT** is "**LOW-TA**" (set under the 7°C threshold), temperature checking is entrusted to the additional thermostat contact, thus bypassing the radio control temperature probe.

If the contact is open (fulfilled), the stove works at minimum power.

If the contact is closed (request), the stove works at the set power.

If the setting is on "HOT" (set above 37°C) the stove always operates at the set power, ignoring the external contact and the temperature probe.

REGULATION OF SET POWER

The **POWER** has 5 levels of operation, Pressing the key allows you to view the set power which can be changed using the keys or .

Power 1 = minimum level - Power 5 = maximum level.

The change must be confirmed by pressing the key **OK**.

AUTO BLOW

During the work phase, the stove cleans the burn pot at regular intervals with the function called "AUTO BLOW".

When this procedure starts, a message is displayed. During the "AUTO BLOW" procedure, the pellet feed slows down and the fumes motor increases.

After cleaning, the stove resumes operation in normal conditions.

SWITCH-OFF

Press the execonds.

Once this operation has been performed, the appliance automatically enters the switch-off phase, blocking the pellet feed.

The flue gas exhaust motor and the hot air flow motor will remain on until the stove temperature has dropped below the safety settings.

REIGNITION

The stove can only be re-ignited if the temperature of the exhaust fumes is lower than the preset threshold and the minimum safety time has passed.



MODES

This menu allows you to set the machine operation logic. Range: (AUTOMATIC, SELF CONTROL)

If AUTOMATIC mode is selected, the stove power will be automatically adjusted to reach the set temperature without exceeding it.

This function improves the experience of using the generator in terms of consumption, thermal and acoustic comfort and the reduction in the need for cleaning and maintenance.

If SELF CONTROL mode is selected, the stove will heat the room to the set temperature whilst maintaining the power set by the user.

To set: OK > MODE > SET

FRONT AIR

This menu allows the front ventilation motor speed to be set. Range: (COMFORT, AUTO).

By selecting **COMFORT** mode, the front air speed is reduced.

The front air is normally excluded when the product is set to minimum power, once the appropriate temperature conditions have been guaranteed.

To set: OK > FRONT AIR > SET

AIR DUCTING (P70 AIR PLUS ONLY)

This menu allows you to set the ducting motor speed. Range: (COMFORT, AUTO).

If COMFORT mode is selected, the ducting speed is reduced.

To set: OK > AIR DUCTING > SET

By connecting an external NTC probe to the input, it is possible to adjust the TEMPERATURE.

To set: OK > AIR DUCTING > TEMPERATURE

AIR ZONE CONTROL (P70 AIR PLUS ONLY)

This menu allows you to enable the AIR ZONE CONTROL mode

Range: (ON, OFF)

If ON is selected, the stove will optimise the adjustment so that the heat is sent to the air ducting when the main room temperature set is reached.

To set: OK > AIR ZONE CONTROL > SET

When the function is active, AIR ZONE CONTROL appears on the display

WARNINGS: If the appliance is installed with air ducting active, but ambient probe or thermostat for air ducting (i.e. the jumper is kept on the ducting terminal), and the AIR ZONE CONTROL function is activated, it sends heat into the ducting regardless of the temperature of the room receiving the ducting.

EASY SETUP

The volumetric weight of the pellet is the ratio between the weight and the volume of the pellet. This ratio may change without altering pellet quality. By using the **EASY SETUP** function, it is possible to dose the pellets by increasing or decreasing the preset values. In the stove program, the available values range from "– 3" to "+ 3"; all stoves are calibrated during production with the optimal value which is 0

If you notice an excessive deposit on the burn pot, access the **EASY SETUP** program and lower the value by one unit to "- 1"; then wait until the next day and if there is no improvement, decrease again, to a maximum of "- 3". If, on the other hand, it is necessary to increase the pellet dosage, switch the factory value from "0" to "+ 1, + 2, + 3" as required.

To set: OK > EASY SETUP

EXCESSIVE PELLET DEPOSIT IN BURN POT			NORMAL OPERATION	MINIMUM	PELLET DEPOSIT IN	I BURN POT
-3	-2	-1	0	+1	+2	+3
THIRD DECREASE RANGE IF THE FIRST TWO ARE INSUFFICIENT	SECOND DECREASE RANGE IF THE FIRST IS INSUFFICIENT	FIRST DECREASE RANGE (TEST FOR 1 DAY)	OPTIMAL FACTORY VALUE	FIRST INCREASE RANGE	SECOND INCREASE RANGE IF THE FIRST IS INSUFFICIENT	THIRD INCREASE RANGE IF THE FIRST TWO ARE INSUFFICIENT

N.B.: IF THESE ADJUSTMENTS DO NOT SOLVE THE PROBLEM OF PELLET DEPOSITS IN THE BURN POT, PLEASE CONTACT YOUR LOCAL SERVICE CENTRE.



CHRONO

This function allows stove ignition and switch-off to be automatically programmed.

The factory setting for CHRONO is off.

The chrono allows the programming of 4 time slots per day, which can be used every day of the week. For each time slot, it is possible to set ignition and switch-off times, specific days of application, desired temperature and set power. Current day and time settings are essential for the correct operation of the Chrono.

Recommendations

Before using the chrono function, you must set the current date and time, so check that you have followed the points listed in the subchapter "DATE-TIME". To use the chrono function correctly, it must not only be programmed, but also enabled. The 4 time slots can be overlapped using the ignition and switch-off time settings. In this way, it is possible to create a combination of time slots with different temperatures and power levels, without changing the status of the stove.

N.B.: in the case of overlapping time slots, the stove will remain on until the last switch-off time.

ENABLING

Allows the chrono and the different stove time slots to be enabled/disabled.

To set: OK > CHRONO > ENABLING

PRG 1-4

Prg x allows you to set the ignition and switch-off time, the days of use of the programmed time slot and the temperature (**LOW-TA** - 07 - 37 °C - **HOT**) and also the desired power. Current day and time settings are essential for the correct operation of the Chrono.

To set: OK > CHRONO > PRGX

CHRONO >	ENABLING	>	PRG 1	ON/OFF	Enable/disable PRG 1
	V		PRG 2	ON/OFF	Enable/disable PRG 2
	V		PRG 3	ON/OFF	Enable/disable PRG 3
	V		PRG 4	ON/OFF	Enable/disable PRG 4
	V				
	PRG1	>	START PRG1	OFF-00:00-23:50	Ignition time PRG1
	V		STOP PRG1	OFF-00:00-23:50	Switch-off time PRG1
	V		MONDAYSUNDAY	ON/OFF	Enable/disable the days of PRG1
	V		SET PRG1	LOW-TA - 07- 37 °C - HOT	Set thermostat PRG1
	V		POWER PRG1	1-5	Set power PRG1
	V				
	PRG2	>	START PRG2	OFF-00:00-23:50	Ignition time PRG2
	V		STOP PRG2	OFF-00:00-23:50	Switch-off time PRG2
	V		MONDAYSUNDAY	ON/OFF	Enable/disable the days of PRG2
	V		SET PRG2	LOW-TA - 07- 37 °C - HOT	Set thermostat PRG2
	V		POWER PRG2	1-5	Set power PRG2
	V				
	PRG3	>	START PRG3	OFF-00:00-23:50	Ignition time PRG3
	V		STOP PRG3	OFF-00:00-23:50	Switch-off time PRG3
	V		MONDAYSUNDAY	ON/OFF	Enable/disable the days of PRG3
	V		SET PRG3	LOW-TA - 07- 37 °C - HOT	Set thermostat PRG3
	V		POWER PRG3	1-5	Set power PRG3
	V	,			
	PRG4	>	START PRG4	OFF-00:00-23:50	Ignition time PRG4
			STOP PRG4	OFF-00:00-23:50	Switch-off time PRG4
			MONDAYSUNDAY	ON/OFF	Enable/disable the days of PRG4
			SET PRG4	LOW-TA - 07- 37 °C - HOT	Set thermostat PRG4
			POTENZA PRG4	1-5	Set power PRG4





WHEN THE WEEKLY PROGRAMMER IS ACTIVE, THE RELATIVE ICON WILL BE SHOWN ON THE RADIO CONTROL DISPLAY.






EXAMPLE OF CHRONO OVERLAPPING TIMES/SLOTS

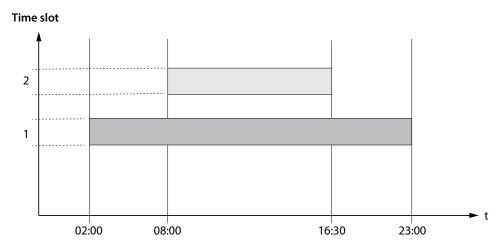

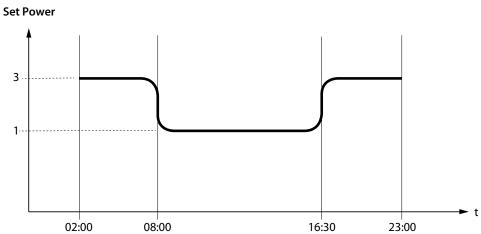

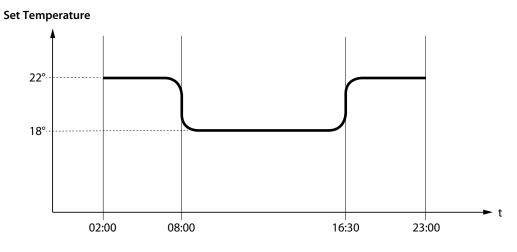

Time slot 1	start 02:00 stop 23:00	Set Power 3 - Set Temp 22°C
Time slot 2	start 08:00 stop 16:30	Set Power 1 - Set Temp 18°C
stove operation		



SETTINGS

- DATE/TIME
- LANGUAGE
- DEGREES

SEE CHAPTER: COMMISSIONING SETTINGS.


DISPLAY

The "DISPLAY" menu allows:



- Regulation of DISPLAY contrast
- $\langle \rangle$
 - Activation/Deactivation of backlight.Enabling/disabling of acoustic signal.
- Setting of the timer to turn off the **Display** backlight.
- STAND-BY RESET
 - Setting of the timer to turn off the **Display** (sleep mode).

To set: OK > SETTINGS > DISPLAY.

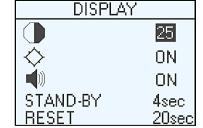

STAND BY

The STAND BY function is used if the stove needs to be turned off immediately instead of a power modulation.

To set: OK > SETTINGS > STAND BY.

STAND BY FUNCTION SET TO ON

If the **STAND BY** function is enabled (ON) and the ambient temperature exceeds the **SET THERMOSTAT** + DELTA-T OFF value, then the stove switches off after a preset factory delay, and **STAND BY** will be displayed on the screen.

When the ambient temperature is less than SET THERMOSTAT - DELTA-T ON and after a certain cooling time, the stove ignites again.

STAND BY FUNCTION SET TO OFF (FACTORY SETTING)

When the **STAND BY** function is not enabled (OFF), if the stove exceeds the set ambient temperature, it will switch to the minimum power level, modulating and displaying **MODULATION** on the screen. When the room temperature is lower than the **SET THERMOSTAT** the stove will restart at the set power and **WORK** will be displayed on the screen.

OPERATION WITH ADDITIONAL THERMOSTAT (OPTIONAL)

STAND BY FUNCTION SET TO OFF (FACTORY SETTING)

When the **STAND BY** function is not activated (OFF), if the stove exceeds the room temperature set on the supplementary thermostat (open contact), it switches to the minimum power level and displays **MODULATION** on the screen. When the ambient temperature is lower than the set value on the additional thermostat (closed contact), the stove will resume operation at the set power, and **WORK** will be displayed on the screen.

STAND BY FUNCTION SET TO ON

If the **STAND BY** function is activated (ON), when the room temperature set on the supplementary thermostat is reached (open contact), the stove will switch off after a pre-set default delay period, and **STAND BY** will be displayed on the screen.

When the ambient temperature is less than the set temperature on the additional thermostat (closed contact), and after a certain cooling time, the stove ignites again.



WHEN STAND BY AND AIR ZONE CONTROL ARE ACTIVE, THE GENERATOR IS SWITCHED OFF ONLY IF BOTH ROOMS (INSTALLATION, DUCTING) REACH THE SET TEMPERATURE.



FOR CORRECT OPERATION, THE SET THERMOSTAT MUST BE SET TO LOW-TA.

> SEE THE INSTALLATION CHAPTER SUPPLEMENTARY THERMOSTAT



FIRST LOAD

This function allows you to activate the gearmotor for continuous pellet feeding. Before starting the function, make sure the stove is cold and "OFF".

To set: OK > SETTINGS > FIRST LOAD

To stop continuous feeding, simply press and hold the key 🔳 for 2 seconds.

QUICK ACCESS:

Before starting the function, make sure the stove is cold and "OFF".

Press keys 🔳 + 🎝 at the same time for two seconds until the message "FIRST LOAD" is displayed.

To stop continuous feeding, simply press and hold the key 🔳 for 2 seconds.

DELTA-T

This function allows the hysteresis thresholds to be set for stove ignition (DELTA-T ON) and switch-off (DELTA-T OFF), used as a room temperature adjustment interval if not managed by an external thermostat. The possible values of DELTA-T vary between 0.5 - 5 °C

To set: OK > SETTINGS > DELTA-T

RESET

Allows the user to reset all editable values to the default values.

To set: OK > SETTINGS > RESET.

EASY CONTROL

The function allows for two values to be set:

- OFF (disabled factory default)
- ON (enabled)

Activation (EASY CONTROL = ON) is recommended in the event that there is an excessive formation of combustion residues in the flue during operation at reduced power (see FLUE EXHAUST chapter).

Caution! It is advisable to activate the EASY CONTROL function under the supervision of a qualified technician.

To set: OK > SETTINGS > EASY CONTROL

DEPRESSURE NOTICE

Allows the radio control buzzer to be activated for an acoustic warning if the door is opened.

Please note: Activation can reduce battery life by 30%.

The battery life depends on the usage

To set: OK > SETTINGS > DEPRESSURE NOTICE.

ADDITIONAL FUNCTIONS

DELAY SWITCH-OFF

You can program a delayed switch-off for the stove. For example, if it is 8 pm and the delayed switch-off is set to 1h, the stove will automatically switch off at 9 pm.

If you press and hold keys + A at the same time, the screen "DELAY SWITCH-OFF" will appear (this setting can only be configured if

the stove is in the PREPARATION or WORK) phase.

Use keys \wedge and \vee to increase/decrease the number of hours after which the stove will automatically start the final cleaning phase. The number of hours range from OFF, 1 to 9.

Press P6 to confirm and return to the home page.

One hour after the set switch-off time, the remaining operating time is indicated by displaying at one-minute intervals "switch off in" and the time "HOURS xx:xx".



TO FIND OUT WHERE YOUR NEAREST SERVICE CENTRE IS, CONTACT YOUR DEALER OR VISIT THE WEBSITE: WWW.LANORDICA-EXTRAFLAME.COM

CLEANING AND MAINTENANCE

ALWAYS FOLLOW THE INSTRUCTIONS IN COMPLETE SAFETY!

- MAKE SURE THAT THE POWER CORD IS UNPLUGGED BECAUSE THE GENERATOR MAY HAVE BEEN PROGRAMMED TO SWITCH ON.
- THAT THE GENERATOR IS COLD ALL OVER.
- THE ASHES ARE COMPLETELY COLD.
- ENSURE EFFICIENT AIR EXCHANGE IN THE ROOM DURING PRODUCT CLEANING OPERATIONS.
- POOR CLEANING WILL COMPROMISE CORRECT OPERATION AND SAFETY!

MAINTENANCE

For correct operation, the generator must undergo routine maintenance by a qualified technician, at least once a year.

The periodic inspection and maintenance operations must always be performed by specialised, qualified technicians, who operate in accordance with the laws in force and the instructions given in this use and maintenance manual.



EVERY YEAR, HAVE THE FUME EXTRACTION SYSTEM, FLUE PIPES AND "T" FITTINGS, INCLUDING THE INSPECTION CAPS CLEANED. IF PRESENT, ALSO CLEAN THE ELBOWS AND HORIZONTAL SECTIONS!

THE GENERATOR CLEANING FREQUENCY IS INDICATIVE! IT DEPENDS ON THE QUALITY OF THE PELLETS AND FREQUENCY OF USE.

THESE OPERATIONS MAY SOMETIMES NEED TO BE PERFORMED MORE OFTEN

PERIODIC CLEANING UNDER USER'S RESPONSIBILITY

The periodic cleaning operations, as indicated in this use and maintenance manual, must be performed with the utmost care after reading the instructions, procedures and frequency described in this use and maintenance manual.

CLEANING THE SURFACES AND COVERING

Never use abrasive or chemically aggressive detergents for cleaning!

The surfaces must be cleaned when the generator and covering are completely cold. For the maintenance of the surfaces and metal parts, simply use a cloth dampened with water or water and neutral soap.

Failure to comply with these instructions may damage the surfaces of the generator and cause the invalidation of the warranty.

CLEANING THE CERAMIC GLASS

Never use abrasive or chemically aggressive detergents for cleaning!

The ceramic glass must be cleaned when the glass is completely cold.

To clean the ceramic glass, simply use a dry brush and some damp newspaper dipped in ash. If the glass is very dirty, use a specific cleaning agent for ceramic glass. Spray a small amount on a cloth and use it on the ceramic glass. Do not spray the cleaning agent or any other liquid directly on the glass or seals!

Failure to comply with these instructions may damage the surfaces of the ceramic glass and cause the invalidation of the warranty.

CLEANING THE PELLET HOPPER

When the hopper is completely empty, disconnect the power cord of the generator, remove the residue (dust, chippings, etc.) from the empty hopper and then fill it up.



THE PELLET HOPPER GASKETS, BURN POT AND FIRE DOOR GUARANTEE CORRECT STOVE OPERATION. THESE NEED TO BE PERIODICALLY CHECKED BY THE USER. IF THEY ARE WORN OR DAMAGED, IMMEDIATELY REPLACE THEM. THESE OPERATIONS MUST BE CARRIED OUT BY A QUALIFIED TECHNICIAN.




IF THE POWER CORD IS DAMAGED, IT MUST BE REPLACED BY THE SERVICE CENTRE OR BY A SIMILARLY QUALIFIED PERSON, SO AS TO AVOID ALL RISKS.



BURN POT AND COMBUSTION CHAMBER:


- Remove the burn pot completely from the relevant compartment.
- Once the flame guard (A) has been removed, vacuum the residue in the burn pot.
- Unblock all the holes in the burn pot using the supplied poker.
- Suck up the ash from the burn pot seat and combustion chamber.
- Re-position the burn pot in its slot and push it towards the fire wall and reposition the flame guard
- Suck up the ash deposit from the ash collection trays;

NOTE: Use a suitable ash vacuum cleaner with a specific container for separation of the ash collected.

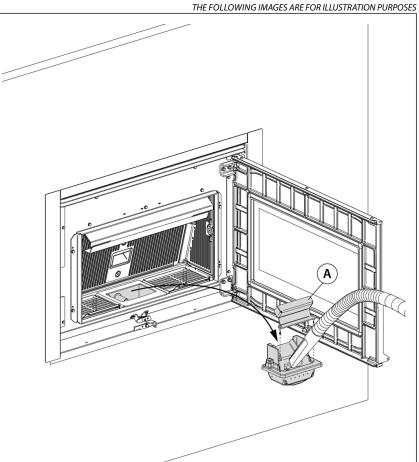

ASH DRAWER:

- Remove the two ash drawers and empty them into a dedicated container.
- Vacuum the ash deposit in the combustion chamber compartment.
- Put the two ash drawers back.

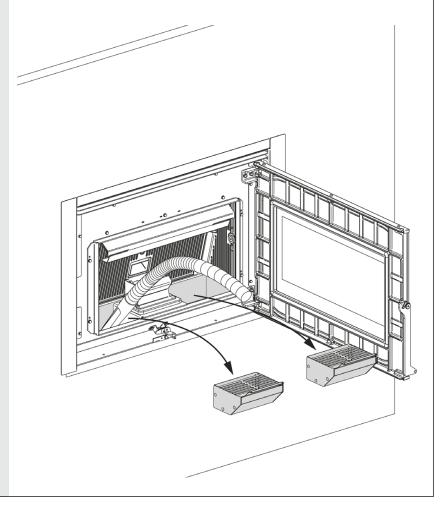




A CLEAN BURN POT GUARANTEES CORRECT OPERATION!



BY KEEPING THE BURN POT AND ITS HOLES CONSTANTLY CLEAN AND FREE OF COMBUSTION RESIDUE, EXCELLENT COMBUSTION IS GUARANTEED OVER TIME, THUS PREVENTING ANY GENERATOR MALFUNCTIONS THAT MAY REQUIRE TECHNICAL ASSISTANCE.

THE "EASY SETUP" FUNCTION IN THE USER MENU CAN BE USED TO ADAPT COMBUSTION ON THE BASIS OF THE NEEDS DESCRIBED.

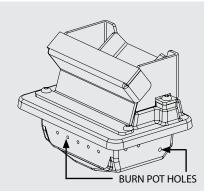

PARTS/FREQUENCY	EVERY DAY	EVERY 3 DAYS	EVERY YEAR
BURN POT (USER)	x		
COMBUSTION CHAMBER (USER)	x		
ASH DRAWER (USER)		x	
HEAT EXCHANGER (TECHNICIAN)			х
T-SHAPED FITTING / SMOKE DUCT (TECHNICIAN)			х

One day means an average use of 8h at the rated power.

How often the ash drawer is emptied depends on a number of factors: the type of pellets, the stove output, the use of the stove and the type of installation.

TO FIND OUT WHERE YOUR NEAREST SERVICE CENTRE IS, CONTACT YOUR DEALER OR VISIT THE WEBSITE: WWW.LANORDICA-EXTRAFLAME.COM

ROUTINE MAINTENANCE PERFORMED BY QUALIFIED TECHNICIANS

Routine maintenance must be performed at least once a year.

Given the generator uses pellets as solid fuel, it requires annual routine maintenance, which must be performed by a **Qualified technician**, using only original spare parts.

Failure to comply may jeopardise safety of the appliance and invalidate the warranty conditions.

By observing the cleaning schedule reserved to the user described in the use and maintenance manual, the generator will be guaranteed correct combustion over time, thus preventing any faults and/or malfunctions which may require subsequent technical assistance. Requests for routine maintenance are not covered by the warranty.

GASKETS: PELLET HOPPER LID, DOOR, ASH DRAWER AND BURN POT

The gaskets ensure the proper sealing of the stove and therefore its proper operation.

They must be periodically checked and immediately replaced if worn or damaged.

These operations must be carried out by a qualified technician.

CONNECTION TO THE FLUE


Annually, or in any case each time the flue pipe needs to be vacuumed and cleaned. If there are horizontal sections, the residue must be removed to prevent it from obstructing the flow of fumes.

SHUT-DOWN (END OF SEASON)

At the end of each season, before turning the stove off, it is advisable to completely empty the pellet hopper, removing any pellet residue and dust with a vacuum cleaner.

Routine maintenance must be performed at least once a year.



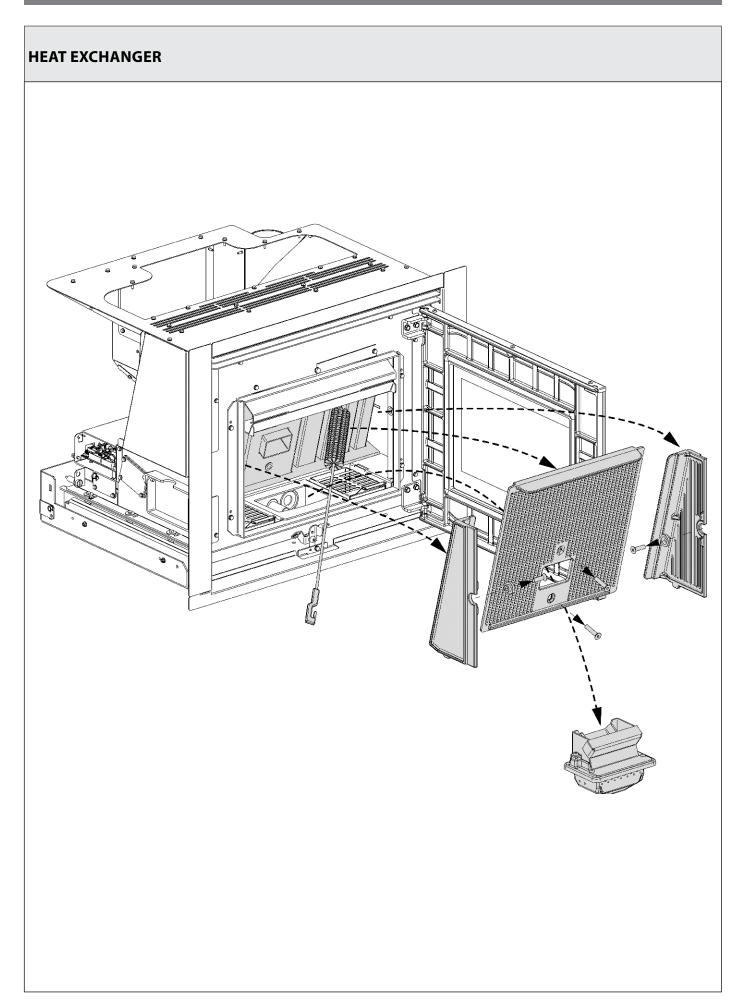




ROUTINE MAINTENANCE

THE IMAGES ARE FOR ILLUSTRATIVE PURPOSES.

P70 AIR

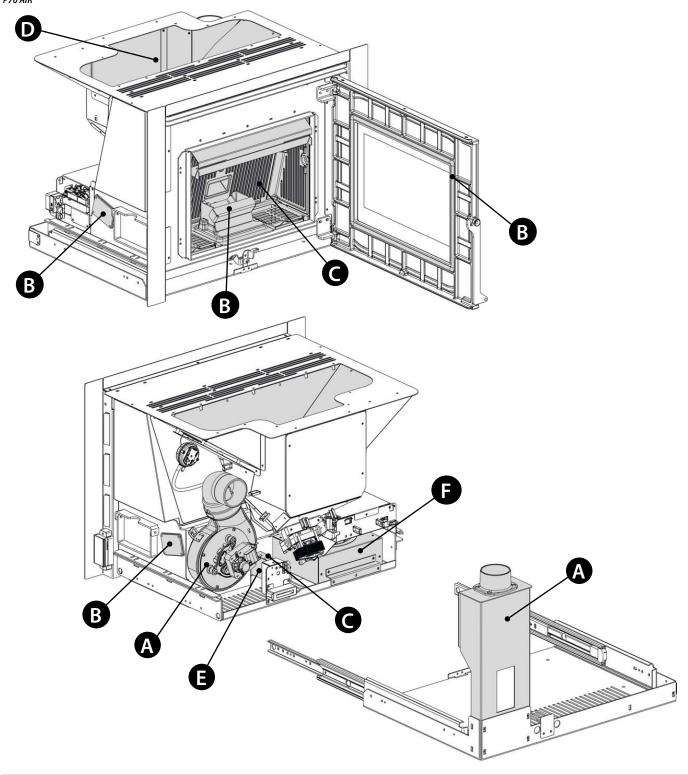


Α	Fumes motor (dismantling and cleaning, flue pipe and "T" fitting).
В	Gaskets, inspections, door (replace if necessary), burn pot and heat exchanger
C	Combustion chamber and heat exchanger (full cleaning) including ignition plug pipe
D	Hopper (complete emptying and cleaning).
E	Check air intake pipe.
F	Dismantling of ambient air fan and removal of dust and pellet residue.



ROUTINE MAINTENANCE

THE IMAGES ARE FOR ILLUSTRATIVE PURPOSES.

P70 AIR PLUS

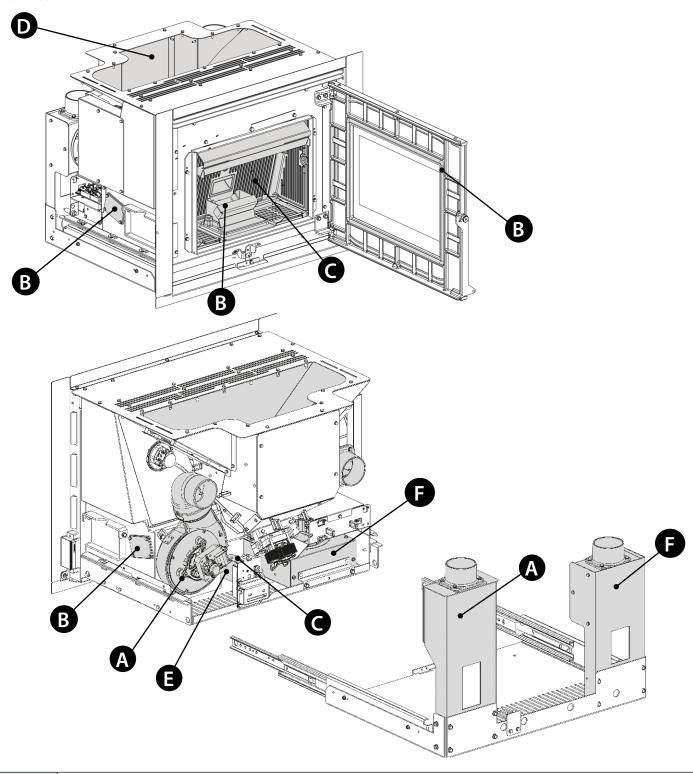

Α	Fumes motor (dismantling and cleaning, flue pipe and "T" fitting).
В	Gaskets, inspections, door (replace if necessary), burn pot and heat exchanger
C	Combustion chamber and heat exchanger (full cleaning) including ignition plug pipe
D	Hopper (complete emptying and cleaning).
E	Check air intake pipe.
F	Dismantling of ambient air fan and removal of dust and pellet residue.



DISPLAYS		
UPDATE	REASON	
OFF	Generator off	
START	The START phase is in progress	
PELLET LOADING	Continuous pellet feeding is in progress during the ignition state	
IGNITION	The phase dedicated to ignition is in progress	
PREPARATION	The flame stabilisation phase is in progress	
WORK	The generator has reached operating capacity and is working on user settings	
MODULATION	The generator is working at minimum capacity	
FINAL CLEANING	The cleaning cycle is in progress which is required to cool the machine before it is switched off	
STAND-BY	Generator off but in stand-by to reignite autonomously if required by operating requests	
COOLING STAND BY	The generator is requested to turn on during the shut-down phase. If activated, the generator will automatically turn on again as soon as safety conditions permit it to do so	
BLACK OUT STAND BY	The generator is cooling after a power cut. Once cooling is completed, it will re-start automatically	
AUTO BLOW	The auto blow is in progress to keep the burn pot clean and maximise combustion efficiency	
EMPTY HOPPER	The pellet hopper is empty. Check for the presence of pellets in the hopper. Contact the after-sales centre.	
CLOSE HOPPER-STOVE DOOR	This indication means that you have 60 seconds to close the hatch/door and the pellet lid. After 60 seconds have passed, the stove will enter "DEPR ALARM" during the ignition phase while during normal operation, the stove will enter "COOLING STAND BY" and then, restart automatically when the conditions are right (clod stove, etc.).	
AIR ZONE CONTROL	This message, visible in the WORK phase, indicates that the appliance is optimising the distribution of hot air between the installation room and the ducted room.	

ALARMS			
DISPLAY	EXPLANATION	SOLUTION	
FUMES MOTOR FAULT	Fumes motor fault	Contact the after-sales centre	
FUMES PROBE	Fumes probe fault	Contact the after-sales centre	
HOT FUMES	High fumes temperature	Check the pellet flow (see "Pellet load adjustment"). If the problem is not solve, contact a qualified technician	
NO IGNITION	The pellet hopper is empty. Pellet feed calibration inadequate. Thermostat bulbs tripped.	Check for the presence of pellets in the hopper. Adjust the pellet flow (see "Easy setup"). Check the procedures described in the "Ignition" chapter. Check bulb thermostats (see chapter on Resetting)	
NO IGNITION BLACK OUT	No current during the ignition phase	Take the stove to off conditions using key 1 and repeat the procedure described in the "Ignition" chapter.	
NO FLAME	The pellet hopper is empty. No pellet feed. The gearmotor does not feed pellets. Thermostat bulbs tripped.	Check for the presence of pellets in the hopper. Adjust the pellet flow (see "Easy setup"). Check bulb thermostats (see chapter on Resetting)	
DEPR ALARM	The door is not closed correctly The combustion chamber is dirty The fumes exhaust pipe is blocked/dirty	Check hermetic door closure. Check cleanliness of the fumes pipe and the combustion chamber.	
AUGER CONTROL ALARM	Abnormal pellet loading	Contact after-sales centre	




DISPOSAL


INFORMATION FOR MANAGEMENT OF ELECTRIC AND ELECTRONIC APPLIANCE WASTE CONTAINING BATTERIES OR ACCUMULATORS




This symbol, which is used on the product, batteries, accumulators or on the packaging or documents, means that at the end of its useful life, this product, the batteries and the accumulators included must not be collected, recycled or disposed of together with domestic waste. Improper management of electric or electronic waste or batteries or accumulators can lead to the leakage of hazardous substances contained in the product. For the purpose of preventing damage to health or the environment, users are kindly asked to separate this equipment and/ or batteries or accumulators included from other types of waste and to arrange for disposal by the municipal waste service It is possible to ask your local dealer to collect the waste electric or electronic appliance under the conditions and following the methods provided by national laws transposing the Directive 2012/19/EU.

Separate waste collection and recycling of unused electric and electronic equipment, batteries and accumulators helps to save natural resources and to guarantee that this waste is processed in a manner that is safe for health and the environment. For more information about how to collect electric and electronic equipment and appliances, batteries and accumulators, please contact your local Council or Public Authority competent to issue the relevant permits.

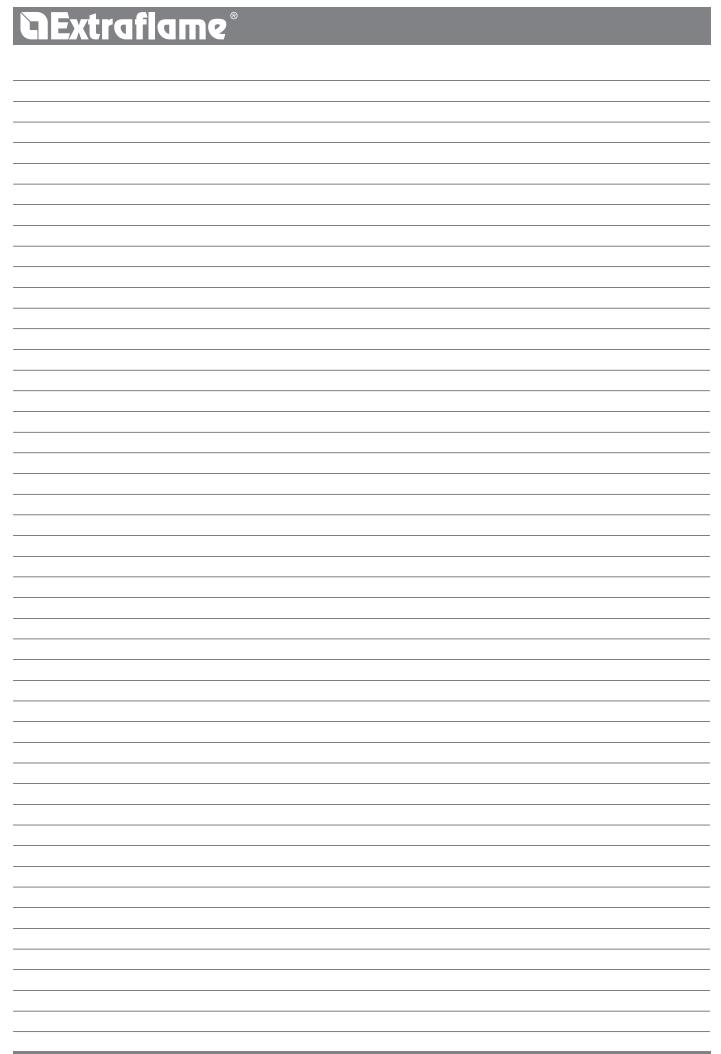

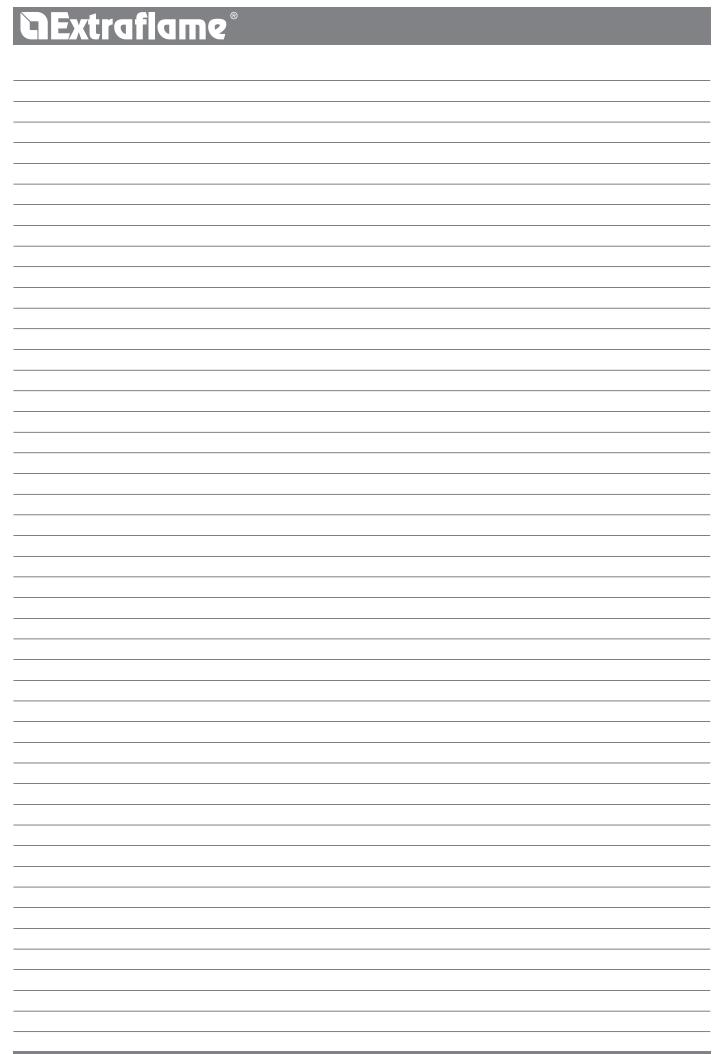

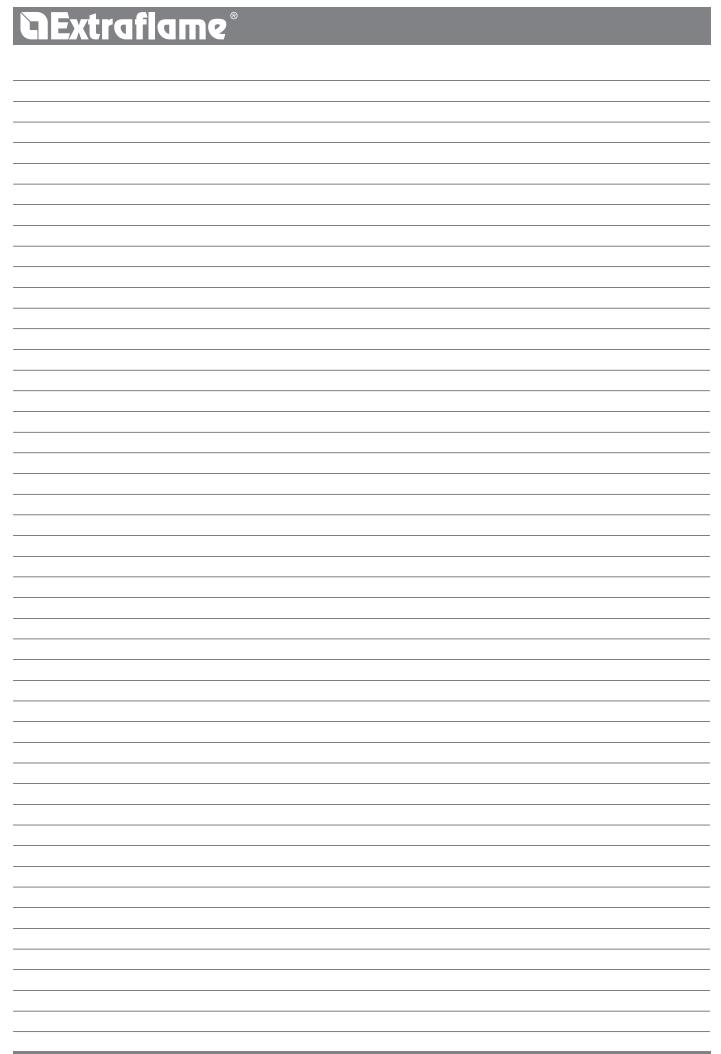





Riscaldamento a Pellet

EXTRAFLAME S.p.A. Via Dell'Artigianato, 12 36030 - MONTECCHIO PRECALCINO (VI) - ITALY # +39.0445.865911 - # +39.0445.865912 - info@extraflame.it - www.lanordica-extraflame.com



TO FIND THE SERVICE CENTRE NEAREST TO YOU
CONTACT YOUR DEALER OR CONSULT
THE SITE WWW.LANORDICA-EXTRAFLAME.COM

The manufacturer reserves the right to vary the characteristics and the data reported in this pamphlet at any moment and without notice, in order to improve its products.